







# QuickFit subfloor system


## Product description

- The basis of the QuickFit subfloor system is a loose lay subfloor system used in conjunction with Forbo polypropylene foam covered by a metallised foil, foam side to the subfloor. The Forbo Foam is provided with a self sticking foil overlap of 20 cm, realising a suitable moisture barrier. Forbo foam must be used with Quickfit panels over all types of subfloors and substrates.
- Has a very good impact sound reduction of 12 dB( $\Delta L_{in}$ ) and 23 dB ( $\Delta L_w$ ) according to EN-ISO 140-8 and 717-2 can be achieved. Australian acoustic test reports and case studies are available on request.
- Overlapping installation of QuickFit panels is rapidly achieved as they are provided with a self-sticking contact adhesive. Pre-printed installation markings on the panels will help installers in working faster. The panels are easy to separate since they are packed in an efficient way. Due to improved production processes, the edges of the boards remain clean. This way of packing and production minimises the need for abrasive corrections after installation.

		QuickFit Panel	Forbo Foam
 Thickness	EN 428	Lower panel: 3 mm Upper panel: 4 mm	4.0 mm
 Roll width	EN 426	-	100 cm
 Roll length	EN 426	-	25 lm
 Panel size		120 x 60 cm 1 pack covers 3.6m <sup>2</sup>	-
 Impact sound reduction	ISO 717-2		12 dB 23 dB (QuickFit + Forbo foam + Marmoleum 2.5 mm)
 Fire resistance	ISO 9239-1		With marmoleum: CRF 5.0 kW/m <sup>2</sup> , Smk Dvlp 309%.min With vinyl sheet: 4.5 kW/m <sup>2</sup> . Smk Dvlp 312%.min

## Points to note

- When trimming seams in the floor covering take care not to cut into the surface of the underlay. Avoid double cutting seams on the underlay if possible or use a suitable protection between the underlay and the floor covering
- Leave the underlay for 24 hours before laying the floor covering
- **QuickFit panels now come with a plastic film covering each panel which must be peeled off to expose the contact type adhesive. If the plastic film is not remove the panels will not form a bond when pressed together.**

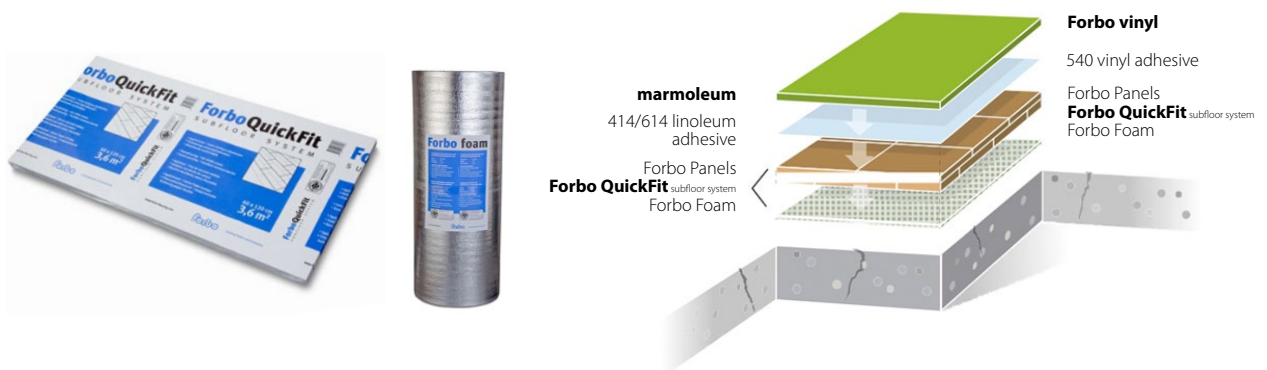

For more information contact your Forbo representative or call 1800 224 471.